
SHEET NO. PROJ. REFERENCE NO. B-3629 TCP-3

AREA I PHASE I

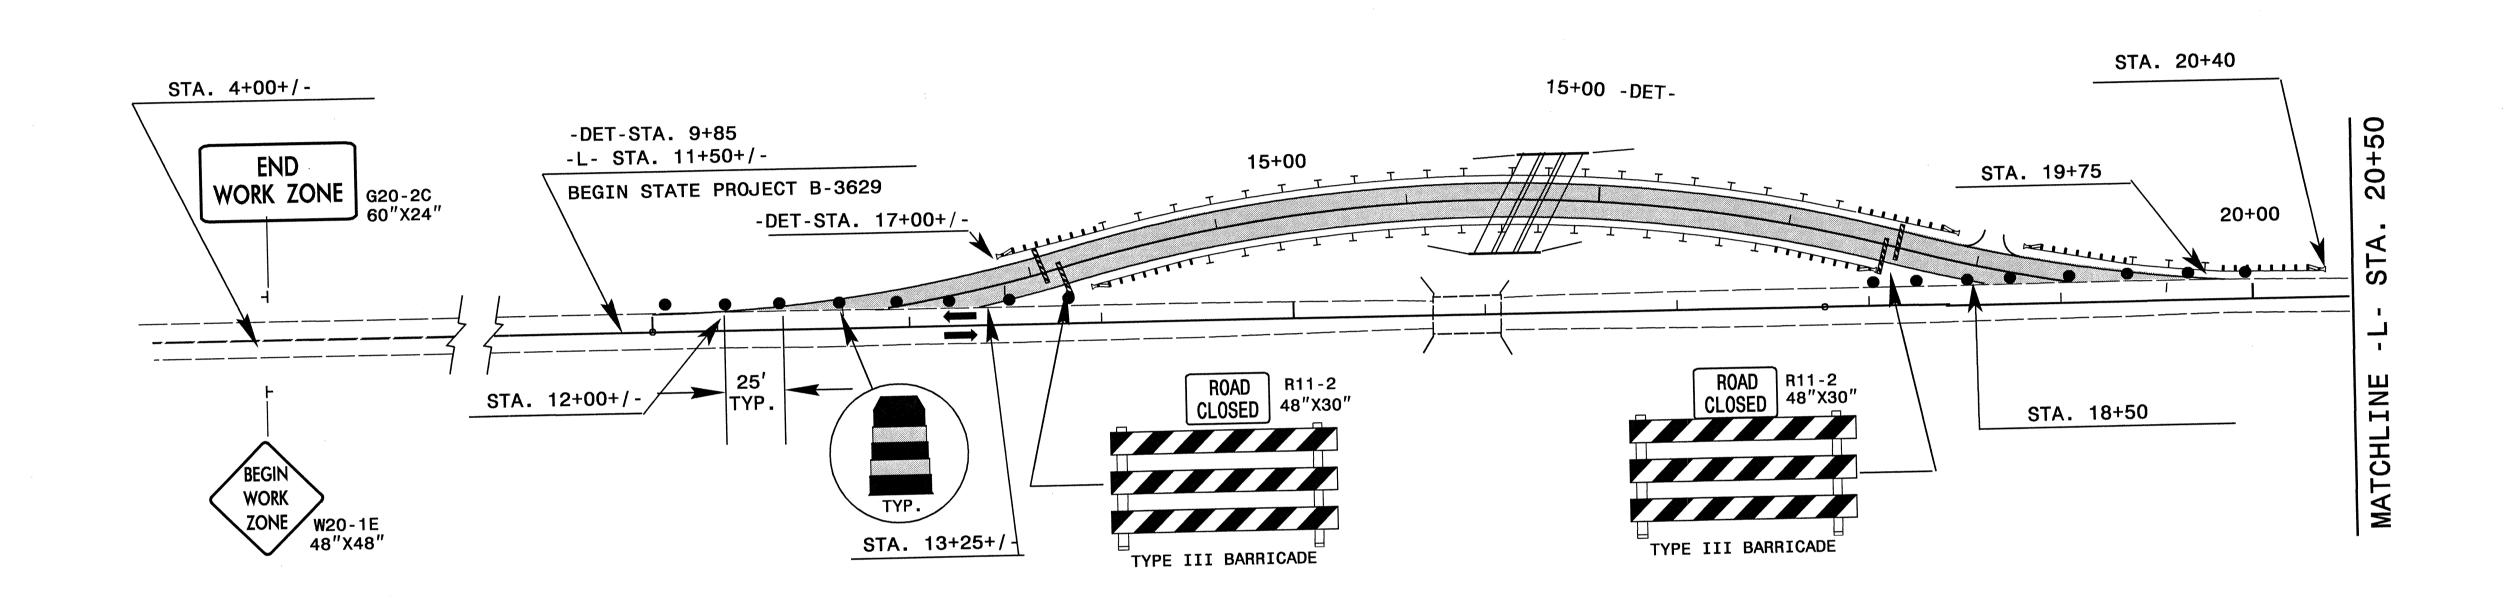



PHASING

NOTE: - INSTALL ADVANCE WARNING SIGNS ON SR 1565 AS SHOWN. IF WORK IS NOT PURSUED WITHIN THREE DAYS OF SIGN INSTALLATION, THE SIGNS SHALL BE COVERED OR REMOVED IN A METHOD APPROVED BY THE ENGINEER ACCORDING TO SECTION 1110 AT NO EXPENSE TO THE DEPARTMENT. COORDINATE CONSTRUCTION OF AREA 1 AND AREA 2 INVOLVING LANE CLOSURE TO AVOID LANE CLOSURE CONFLICTS.

- USING ROADWAY STANDARD DRAWING 1101.02, SHEET 1 OF 7, ROADWAY WIDENING FROM STA. 11+00+/- TO STA. 33+00+/- CAN BE CONSTRUCTED AT ANY TIME PRIOR TO PLACEMENT OF THE FINAL SURFACE LAYER AND WITHOUT CONFLICTING WITH AREA 1 AND AREA 2 LANE CLOSURES.

AREA I - PHASE I STEP 1. USING ROADWAY STANDARD DRAWING 1101.02, SHEET 1 OF 7 AS NEEDED, CONSTRUCT DETOUR STRUCTURE, TEMPORARY GUARDRAIL, AND DETOUR ROADWAY, INCLUDING TIE-INS, FROM STA. 12+00+/- TO STA. 20+40+/- AS SHOWN.

USING ROADWAY STANDARD DRAWING 1101.02, SHEET 1 OF 7, COMPLETE THE FOLLOWING STEP IN A CONTINUOUS MANNER.


STEP 2. APPLY TEMPORARY PAVEMENT MARKINGS AND SHIFT TRAFFIC TO DETOUR PATTERN. INSTALL TRAFFIC CONTROL DEVICES AND SIGNS AS SHOWN ON TCP-4 AND TCP-6.



WORK AREA



PAVEMENT REMOVAL

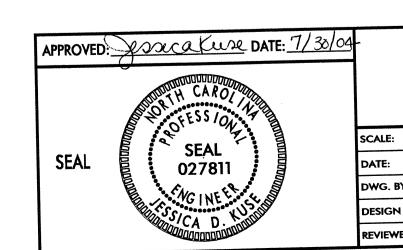

AREA 1 PHASE I

NONE	OF NEER AND CAPE	
6/14/04		
· WRH		
BY: WRH	The state of the s	
D BY: JDK	CONTROL	CADD FILE

REVISIONS